
	FICHE D'INSTRUCTION TECHNIQUE	N° : V 54 0013
	MONTAGE CLIC E AVEC PINCE 252 FITTING OF CLIC E CLAMP WITH PLIERS REF 252 MONTAGE VON CLIC E SCHELLE MIT ZANGE 252	Date : 14/04/2014 Indice : E

1- Choose the opening of the pliers by pushing the button [Ref. N°1] towards either large Ø or small Ø.

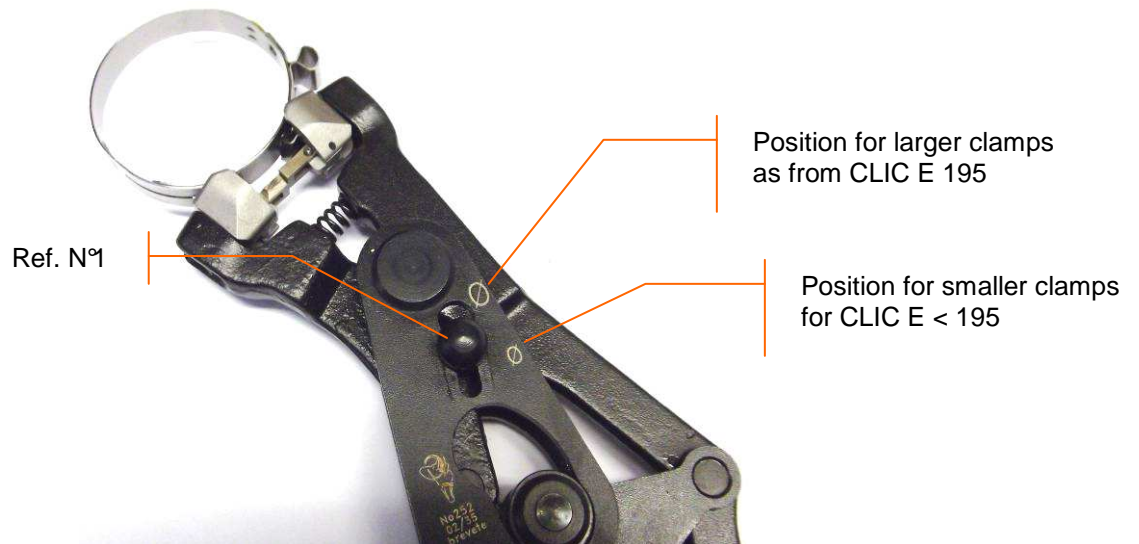

2- Introduce the CLIC E clamp into the pliers' jaws.

➤ **Correct introduction of the clamp (ear ① and latch ②, either way around)**



➤ **Proper introduction**



➤ **Improper introduction (reserve ③)**





FICHE D'INSTRUCTION TECHNIQUE

N° : V 54 0013


Date : 14/04/2014

**MONTAGE CLIC E AVEC PINCE 252
FITTING OF CLIC E CLAMP WITH PLIERS REF 252
MONTAGE VON CLIC E SCHELLE MIT ZANGE 252**

Indice : E

3- Check that the CLIC E clamp is well maintained in the pliers.

➤ **Clamp introduced into the jaws.**

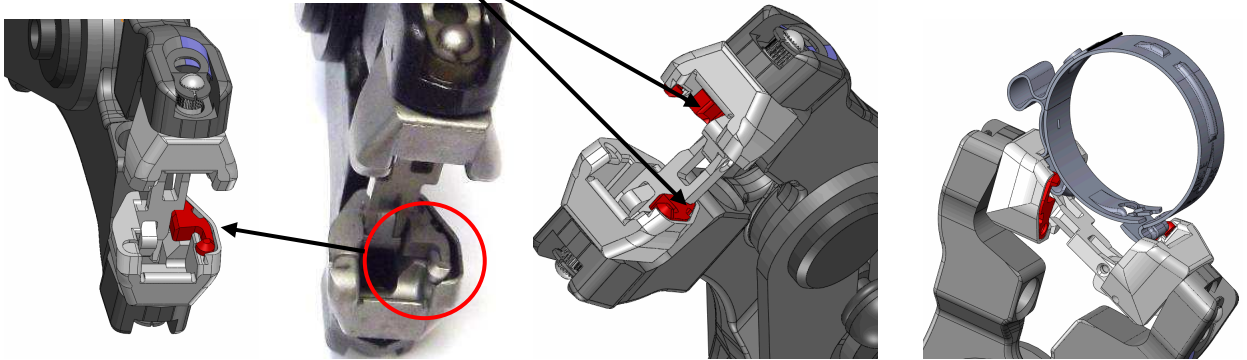


➤ **The clamp is well maintained / it can swivel.**




4- Fit and tighten the CLIC E clamp


➤ Fit the CLIC E clamp onto the hose.

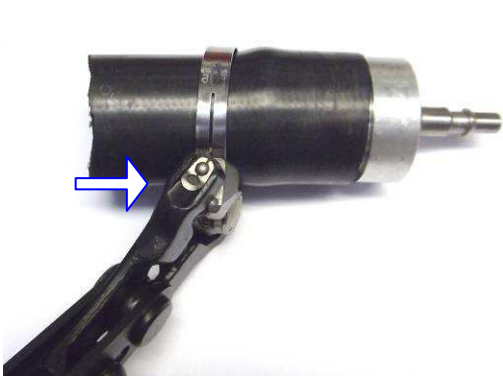

➤ Close the pliers to tighten the CLIC E clamp.

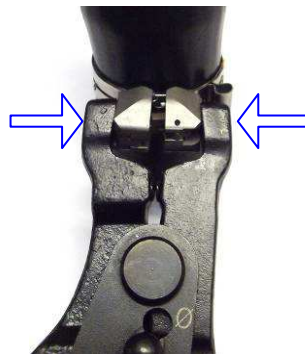

➤ A correct clipping of the CLIC E clamp enables the withdrawal of the pliers.

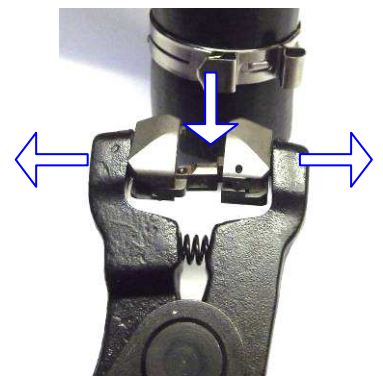



FICHE D'INSTRUCTION TECHNIQUE


N°: V 54 0012

MONTAGE KIT BECS PINCE CLIC E REF. 252
ASSEMBLY OF JAW SETS ON CLIC E PLIERS REF. 252
MONTAGGIO KIT BECCHI PINZA CLIC E RIF. 252
BACKENMONTAGESATZ FÜR ZANGE E REF. 252


Date : 14/04/2014

Indice : I


1) JAW set: PN 549000252

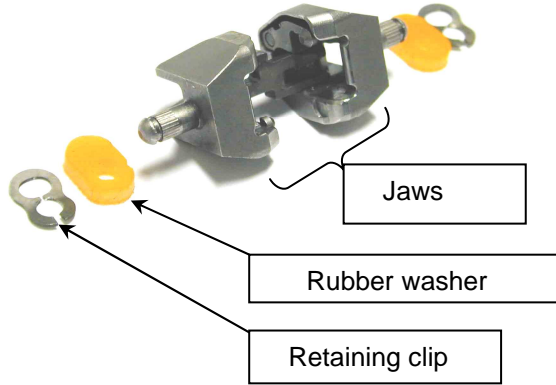

2) Fit the 2 rubber washers.

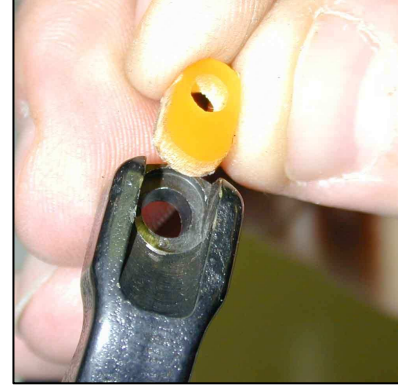


4) Introduce the jaws into the pliers' nose.

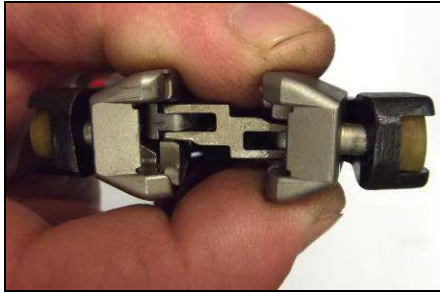

4) Position the clips.



5) Fit the clips with a 4mm hex socket screwdriver.

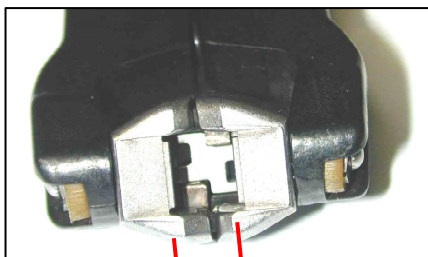

Pliers closed => 7.6 max.